

GR-308/15L/MAR SELF-TESTING MAINTAINED EMERGENCY LUMINAIRE WITH WHITE LED's



TECHNICAL CHARACTERISTICS

OPERATION VOLTAGE	220-240V AC/50-60Hz
MAXIMUM POWER CONSUMPTION	4W/7VA
BATTERY (Ni-Cd)	3,6V/3Ah
BATTERY PROTECTION	From overcharge and full discharge
INDICATIONS - CONTROLS	Charge, lamp fault, fault indication LED, TEST button
CHARGING TIME	24h
MINIMUM AUTONOMOUS DURATION	8 h
ILLUMINATION SOURCE	15 white LED
ILLUMINATION (230V / EMERGENCY)	105/105lm
DEGREES OF COVER PROTECTION	IP 40
PRODUCED IN ACCORDANCE WITH	EN 60598-1, EN 60598-2-22, 55015, 61547, 61000-3-2, 61000-3-3, IEC 60092-306, IEC 60533
OPERATION TEMPERATURE RANGE	5 to 40 °C
RELATIVE HUMIDITY	Up to 95%
CONSTRUCTION MATERIALS	Bayblend FR3010, transparent polycarbonate
EXTERNAL DIMENSIONS	350 x 134 x 45 mm (CRV 362 x 134 x 58 mm)
TYPICAL WEIGHT	760gr.
GUARANTEE	3 years (1 year for the battery)

Thank you for purchasing this product of Olympia Electronics. A European manufacturer.

GENERAL

These luminaires are suitable for marine and offshore applications where emergency light is needed. Each luminaire must be permanently connected to mains power supply. In normal operation the led strip lights and the battery is charging. In case of a mains power supply failure the luminaire will light the led strip automatically in emergency mode (powered by its battery). When the mains power supply is restored the device turns to normal operation.

INSTALLATION

To install the luminaire follow the installation instructions on page 4.

Battery Charging

The battery charging is completely controlled. In this case, the best possible battery maintenance is achieved, as well as the elongation of its duration. When the battery has completely charged, it charges with a maintenance current.

Battery Cut-off

The luminaire enters in this operation when the mains power supply fails and battery has lost its energy. During this operation the luminaire enters the idle state and battery consumption is negligible, in order to be protected from deep discharge.

Manual Test

The manual test can be conducted only if the main power supply and the battery is connected. By pressing the test button briefly an operation test is initiated. During this test period all indication LEDs are OFF.

Automatic Test

This test includes all the operations that provide the manual test and is conducted automatically every 15 days. In order to be performed, the main power supply and the battery should be connected.

Automatic Autonomous Test

The Automatic Autonomous Test is conducted and measures the luminaire's back up operation. This test is conducted automatically every six months. In order to be performed, the main power supply and the battery should be connected (the battery should be charged). If the battery is not charged, the test is postponed until the battery is completely charged. If during the Automatic Autonomous Test the luminaire's duration is lower than the nominal, then the battery must be replaced.

Back Up Operation

The autonomous duration of battery during emergency mode is at least the one that is stated in the technical characteristics. During emergency mode, a LED strip test is also performed.

Resetting Errors

Push the Test button for 5 seconds, to extinguish all the indicated LED errors. Then the luminaire enters regular operation mode.

Indication LED status (with connected mains power supply).

Charge

On: Good charge current.

ff: No battery (No charging current or disconnected battery).

Lamp Fault with L1 connected to L

n (with LED strip off): Faulty LED strip (must be replaced).

n (with LED strip on): Problem in the back up circuit of the LED strip (must be checked by an authorized personnel).

Off: Good LED strip.

Battery Fault

ff: Battery OK.

Blink (With Charge LED ON): Autonomy or low battery problem

(the battery must be replaced).

Blink (With Charge LED Off):

No charging current or disconnected battery.

!!!

1. Operations for installation, maintenance or testing must be done by authorized personnel

only.

2. The device must be connected to the mains power supply through a fuse dependent by the total amount of the line's power load.


3. In case of battery or lamp replacement, these must be replaced by parts of the same type, by the manufacturer or by a competent person.

4. In case of inactive use for a period greater than 2 months, disconnect the battery by pulling out the battery's connector.


5. **It is not allowed to discard batteries in to common trash bins, they must be discarded only in battery recycling points. Do not incinerate.**



Installation methods

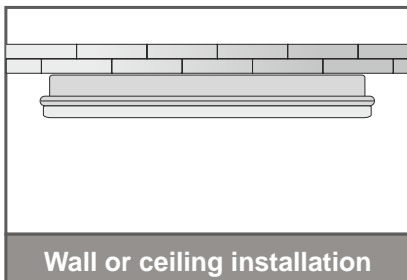

Wall or ceiling installation

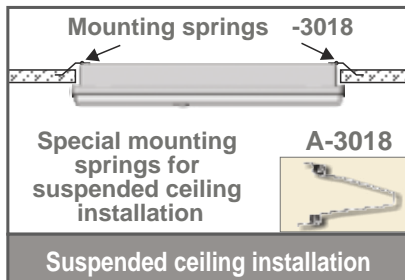


Mounting springs -3018

Special mounting springs for suspended ceiling installation


A-3018

Suspended ceiling installation

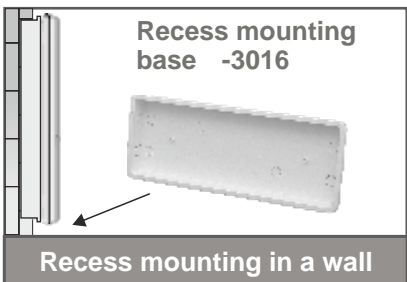


Recess mounting base -3016

Recess mounting in a wall

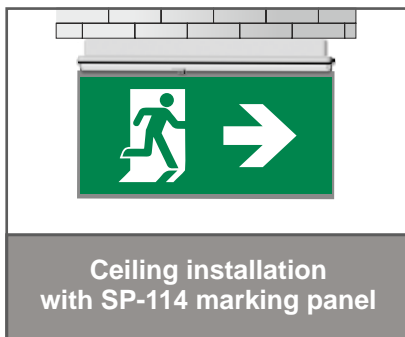

Ceiling installation with SP-114 marking panel

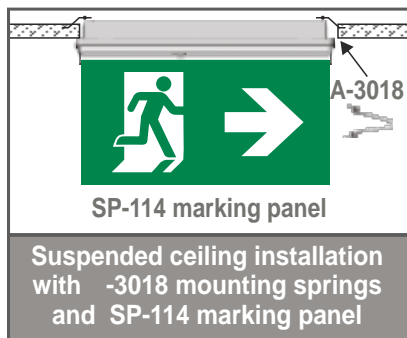

A-3018

SP-114 marking panel

Suspended ceiling installation with -3018 mounting springs and SP-114 marking panel



Wall installation with SP-114 marking panel

Mounting methods

All "Easy Light" can be mounted either surface or recess mounted in walls or suspended ceilings. For recess mounted installations, special accessories are required which can be found in the catalog and must be ordered separately.

Suspended ceiling installation.

 


On the bottom of the base plastic of the Easy light luminaire there are two H shaped cut outs. These are used to install the A-3018 mounting springs.

1. With a sharp tool remove the appropriate plastic pieces to fit the mounting springs. First place the edges of the mounting spring to the respective holes and install the one end of the coil to the support axis.
2. Install the other end of the coil to the other support axis.
3. Bend the springs and place the luminaire to the respective suspended ceiling's hole.


The luminaire's placement to the suspended ceiling must be done after the connection with power supply cables.

Recess mounting in a wall


The special mounting base (A-3016) can be built in the wall and on it can be mounted the luminaire with the -3016 included screws, following the installation instructions of the luminaire. The mounting base contains pre-etched holes for cable entry that are aligned with the cable entry holes of the luminaire.

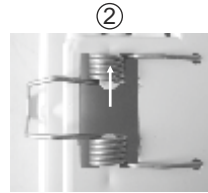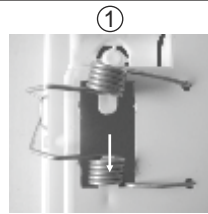

 Mounting Easy Light luminaire in a suspended ceiling



Bottom view of a wall

 

Recess mounting for an "Easy Light" luminaire in a wall.

PLACING -CRV PARTS

To install the curve crystal -CRV you must first install the included plastic extension to mount it on the TEST button.


MARKING PANEL SP-114

A marking panel SP-114 can be installed on the luminaire in 3 different locations. This marking panel is installed perpendicular to the diffusor of the luminaire, as shown in the pictures below. The panel is pre-printed and has a plastic accessory on each side that is used to fasten the panel to the luminaires. There are 2 arrow stickers that can be placed in each side of the marking panel to point to the desired direction.








Placing the SP-114 marking panel

Place the plastic mounting accessories of the marking panel as shown in pictures.


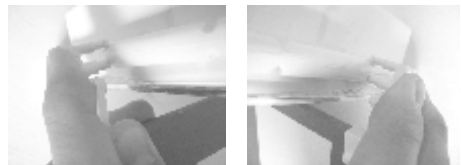


!! This marking panel (SP type) can not be installed on CRV luminaires.

INSTALLATION INSTRUCTIONS

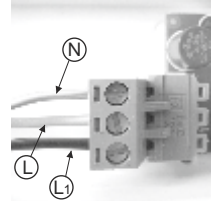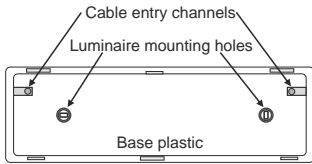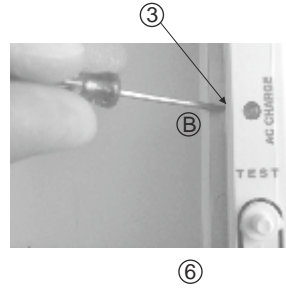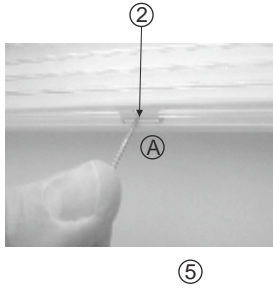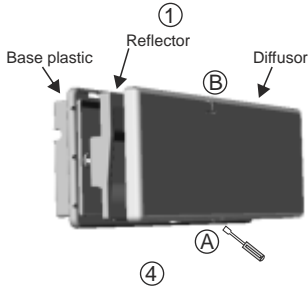

- ① To install the luminaire you must dismantle it into 3 parts.
- ② Place a flat blade screwdriver in the area **A** to release the diffuser's plastic hook.
- ③ Place a flat blade screwdriver in the area **B** to release the reflector's plastic hook.
- ④ Use the included mounting parts to mount the base plastic. Pass the mains cable through a cable entry channel. The luminaire must be connected to a permanent electrical installation to ensure the immobilization of the cable.
- ⑤ Place the battery's connector to the corresponding connector on the P.C.B.
- ⑥ Connect the mains cables to the respective detachable terminal block. **for neutral, L for live wire and L1 for the maintained operation.** The L1 wire can be connected to an external switch to control the maintained or non maintained operation of the luminaire. For permanent maintained operation use two wires to power the luminaire, for neutral and L for live wire, and link the L and L1.
- ⑦ Refit the removed parts in steps 2 and 3 (mind the correct orientation) and the luminaire is ready to operate.

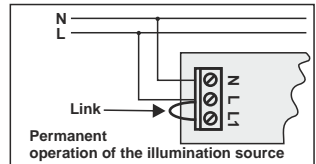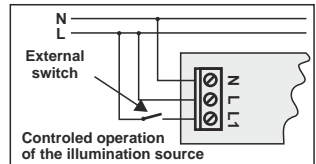

NOTE!!

After finishing the installation you must power the luminaire at least for 24 hours for battery charging to perform the nominal autonomy.

NOTE: LED= Light Emitting Diode

LABELING EXPLANATION:

X: Self contained

1: Maintained (*)

A: Including test device

480: 8 hour duration

All the types of **Easy Light** series, are also produced with a new designed crystal with **GR-XXX/MAR/CRV** code, for example **GR-308/15L/MAR/CRV**.

(*) Maintained operation: The luminaire lights its illumination source, when it is powered by the mains power supply or not.

Non Maintained operation: The luminaire lights its illumination source, only in power supply's failure.

Battery replacement.

It can be done only by a competent person and after the mains interruption.

1. Follow the step 2 and 3 of the installation procedure.
2. Disconnect the connector and remove the old battery.
3. Connect the new battery with the same type (step 5 of the installation procedure) and place it in the position of the old one.
4. Follow the step 7 of the installation procedure and power the device.