


USB Analogue Systems Panel Interface

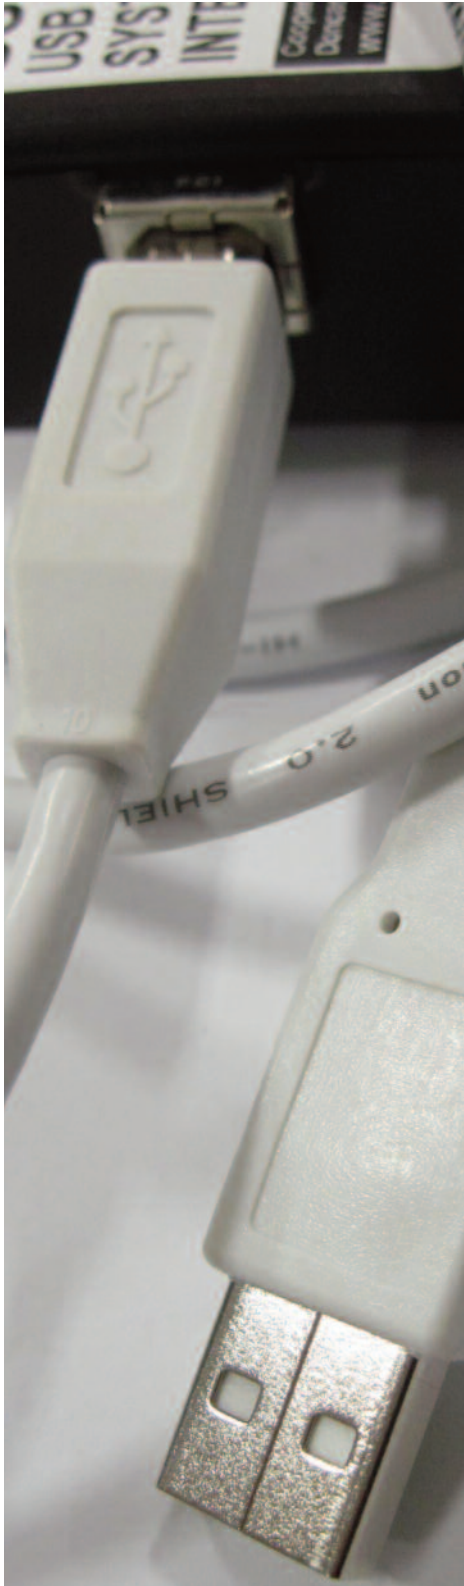

USBINT2 - USB Analogue Systems Panel Interface

Overview

The analogue systems panel interface (USBINT2) is a universal serial bus converter that provides conversions from RS232 to USB, TTL to USB or TTL to RS232.

These options provide the connectivity required between a PC and intelligent addressable control panels, wireless control panels, and wireless survey tools.

Features

- Intelligent addressable control panel to PC site installer connection using the RS232 to USB configuration
- Wireless control panel to PC site installer connection using the RS232 to USB configuration
- Wireless control panel to PC wireless live monitor connection using the TTL to USB/RS232 configurations
- Wireless survey tool to PC survey tool connection using the TTL to USB/RS232 configurations

Benefits


- Simple PC driver installation
- Simple DIP switch configuration

Kit Contents

1 x USBINT2
1 x Driver CDROM
1 x USB Cable
1 x RS232 Cross-Over Cable
1 x TTL Cable

Configuration Settings

Switch Positions				Mode	Usage
4	3	2	1		
OFF	OFF	OFF	OFF	TTL to USB	<ul style="list-style-type: none"> Wireless Panel to PC Live Monitor Wireless Survey Tool to PC Survey Tool
ON	ON	OFF	OFF	TTL to RS232	<ul style="list-style-type: none"> Wireless Panel to PC Live Monitor (no USB available) Wireless Survey Tool to PC Survey Tool (no USB available)
OFF	OFF	ON	ON	RS232 TO USB	<ul style="list-style-type: none"> Intelligent Addressable Panel to PC Site Installer Wireless Panel to PC Site Installer

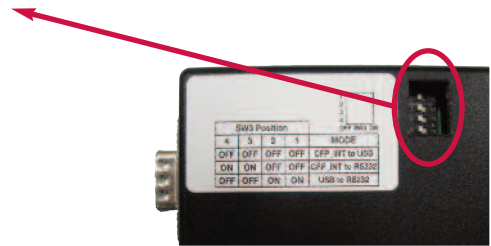

Cable Connections



TTL to USB - Wireless survey tool connection



TTL to RS232 - Wireless survey tool connection (serial link)



RS232 to USB - Wireless panel to PC (site installer)

Product Codes

Code	Description
USBINT2	USB Analogue Systems Panel Interface